




# Dell Laptop hardisk and RAM Replacement

Written By: Amal

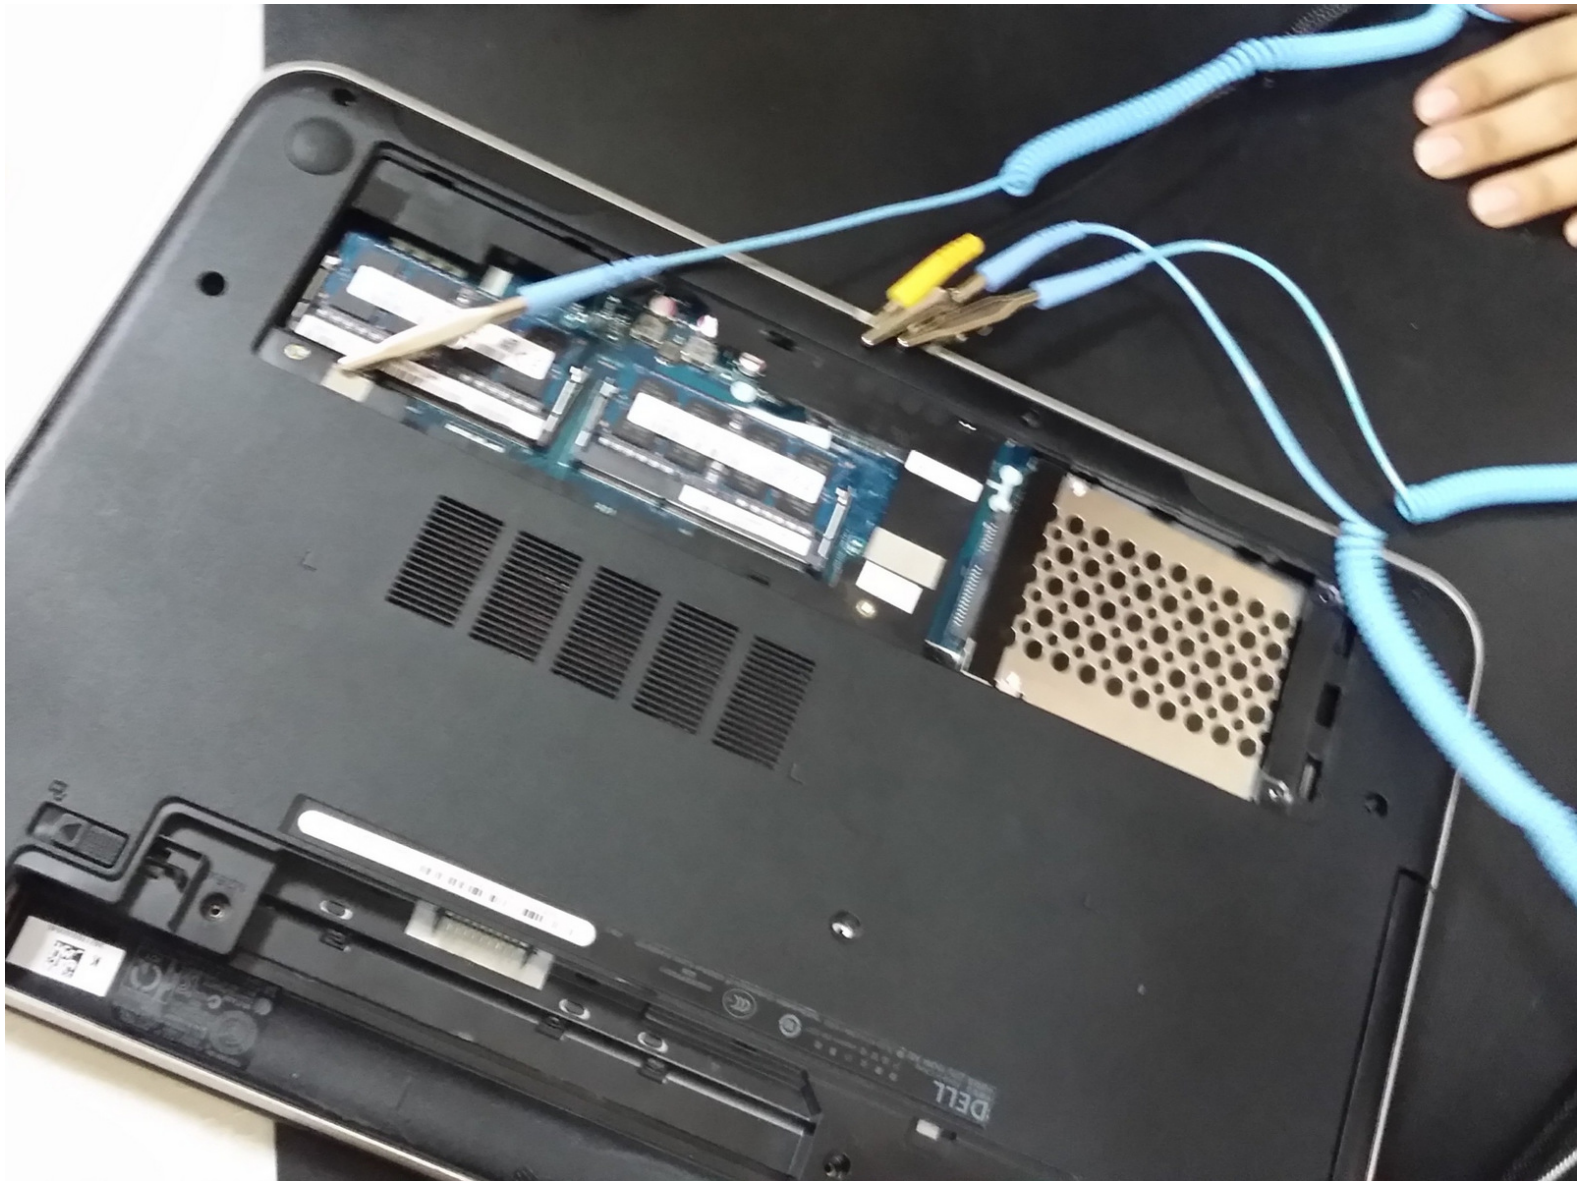


## Step 1 — hardisk and RAM




- Remove the battery from the laptop.
- Remove the RAM access panel screw.

## Step 2

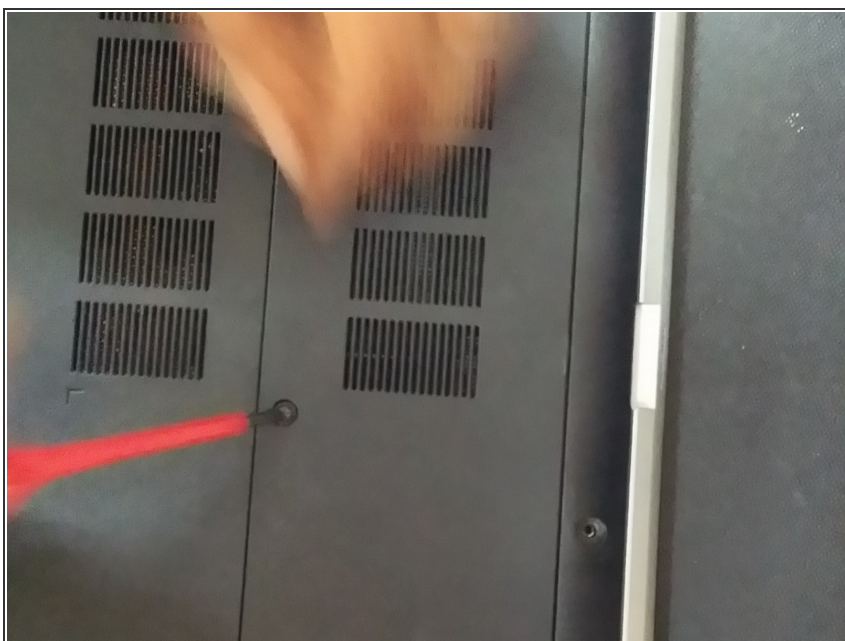

- Remove the RAM access panel. Unlock the RAM retainer clips on each side of the module.

## Step 3

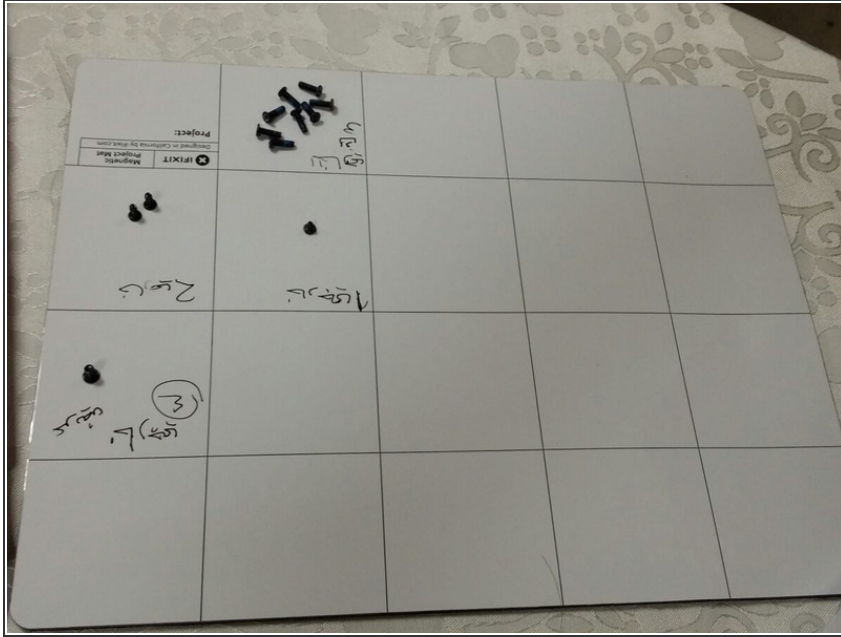

- Be sure to organize the screws, as they are various different sizes!


## Step 4



- Remove the RAM module. .Insert the RAM into the RAM slot. Place the RAM access panel over the installed RAM module.



## Step 5

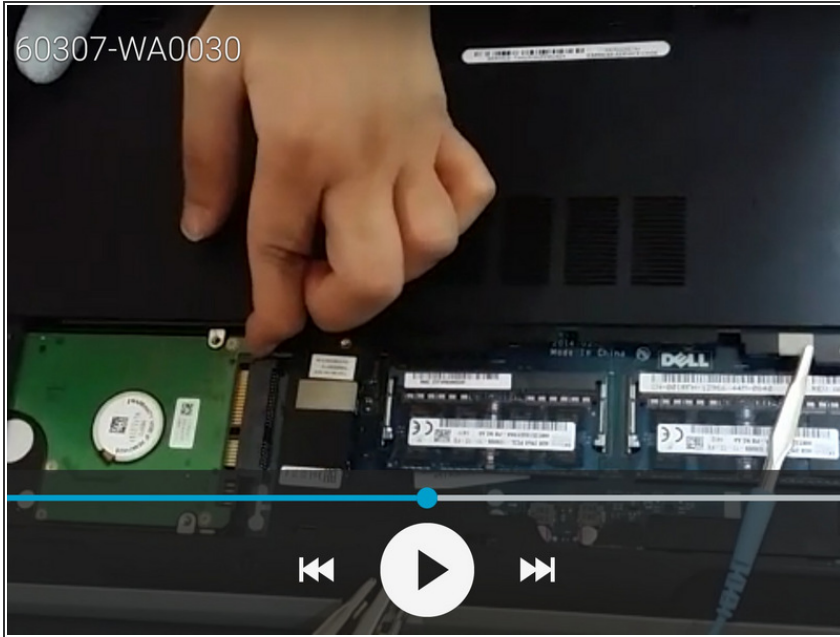

- Remove the HDD access panel screw.
- Remove the HDD from the laptop.
- Place the HDD access panel on the HDD.
- Install the HDD in the laptop.  
Retrieve the HDD access panel screw from the antistatic mat

## Step 6



- Insert wisdom here.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 03:08:39 PM.